

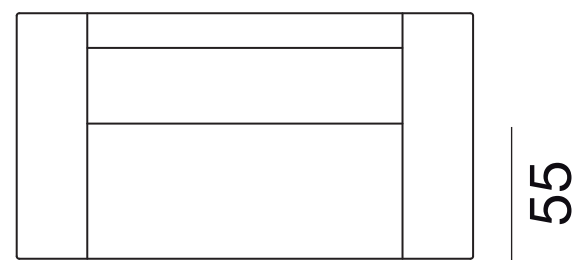
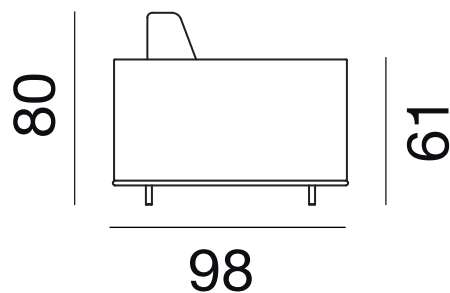
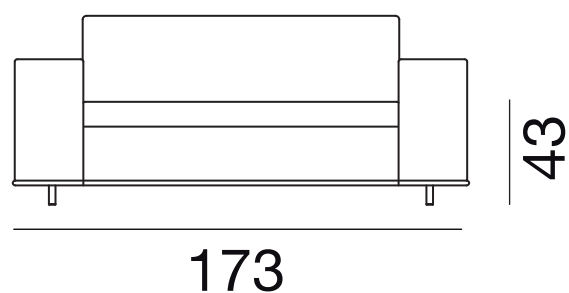
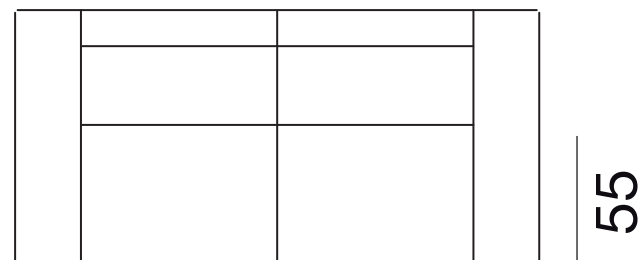


Sofa / Sofa




/02

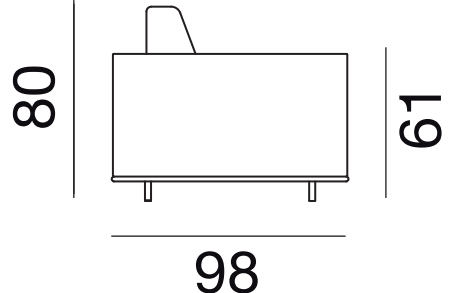

/03



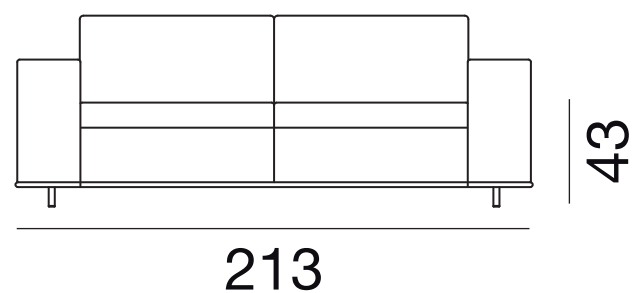


/04

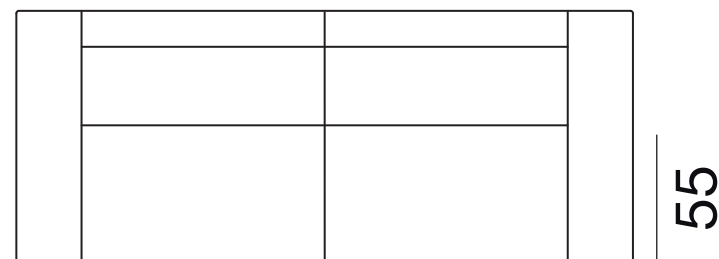
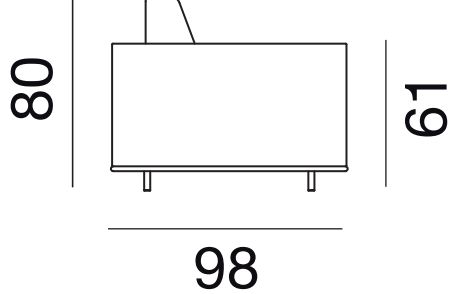
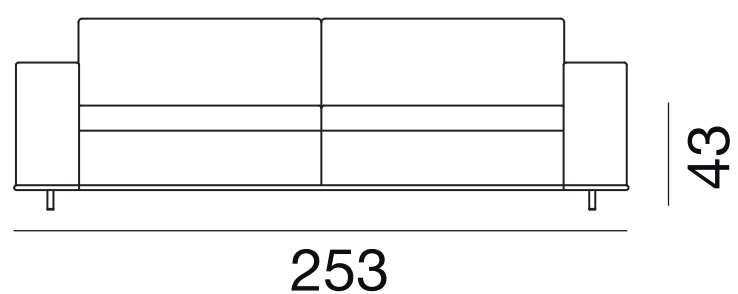


Anbauelemente/Additional element




/19

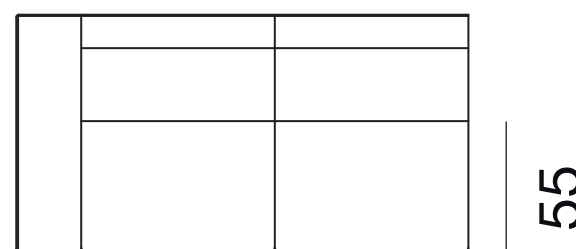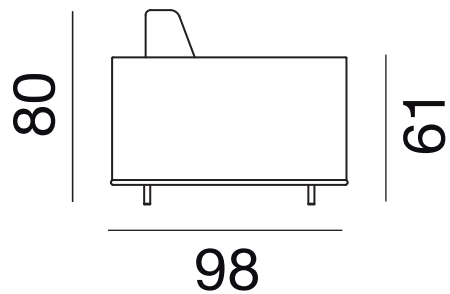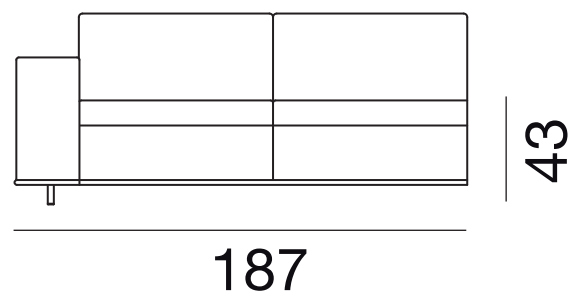




/29

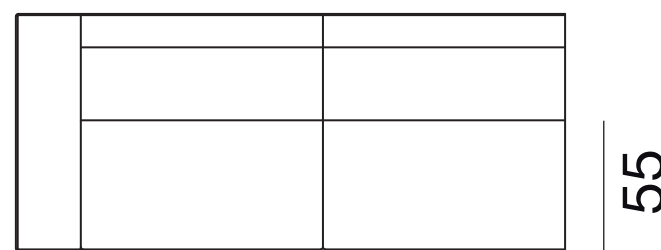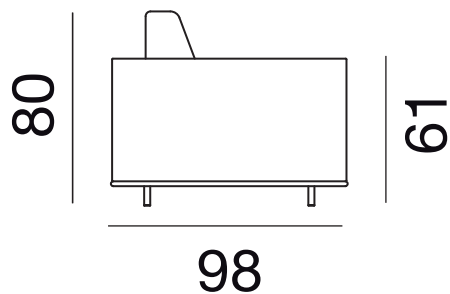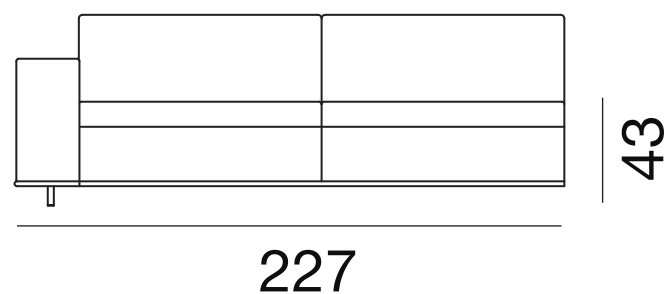

/20

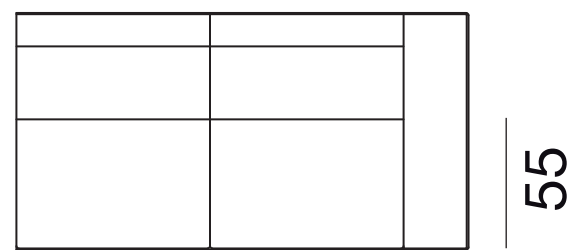
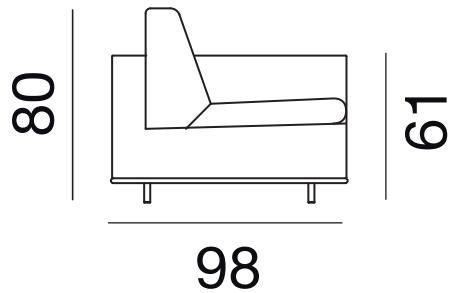
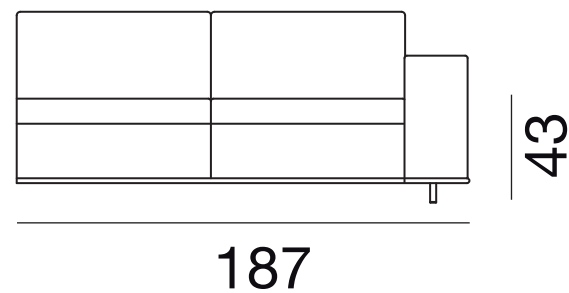


/30

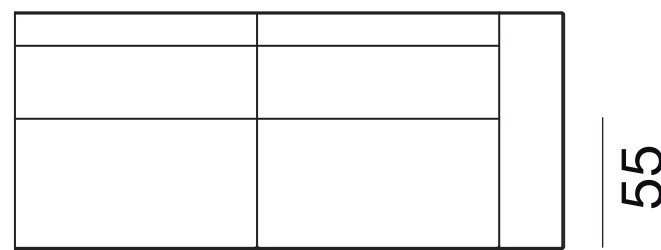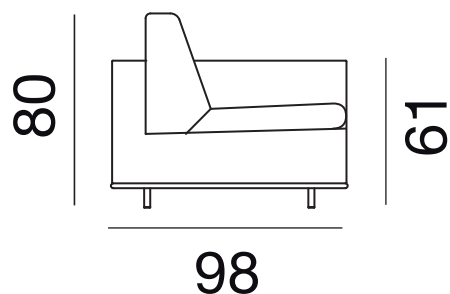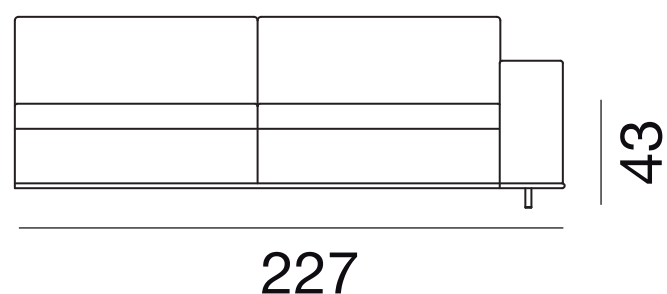


Eckelemente/Corner elements

/08

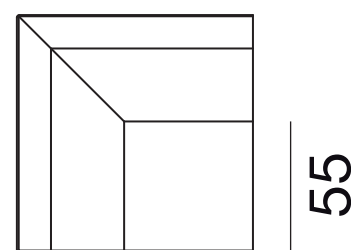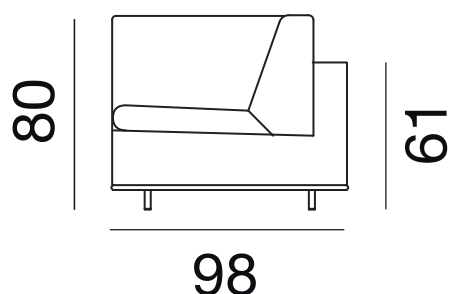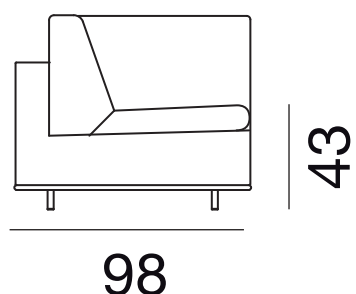


Sofa

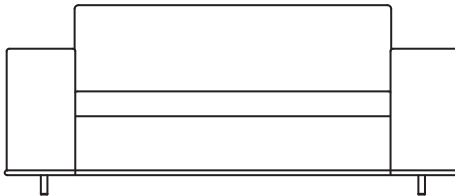

173


43

80

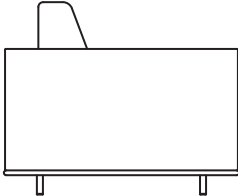


98

61

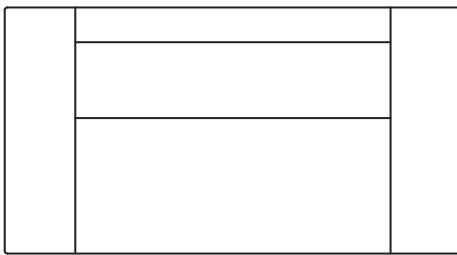


55

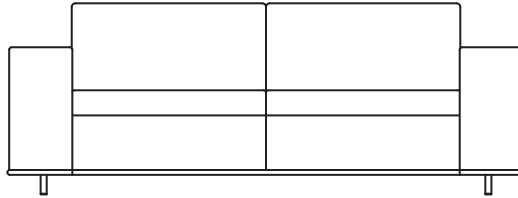

213


43

80

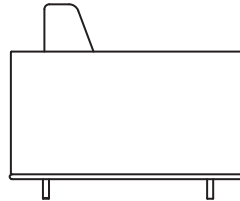


98

61

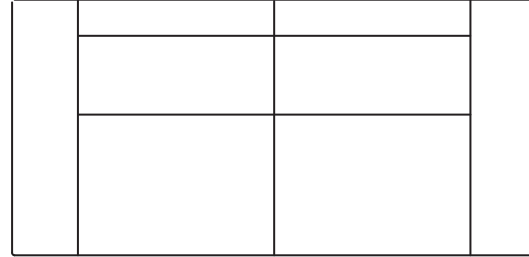


55

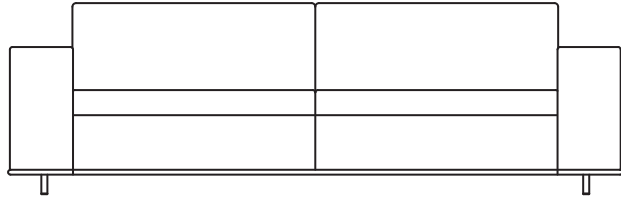

253

43

80

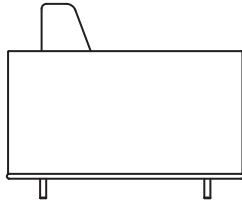


98

61




55

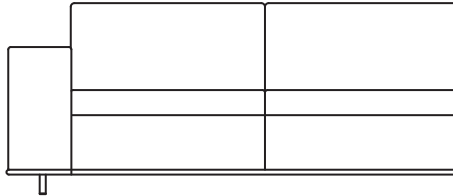

187


43

80

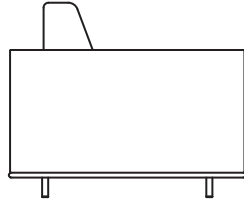


98

61

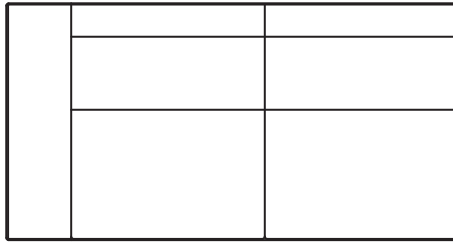


55

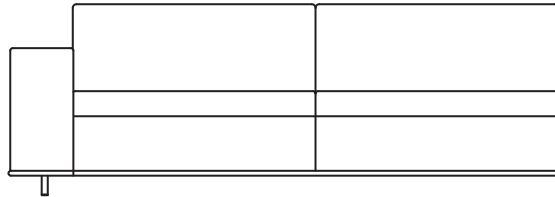

43


227

80

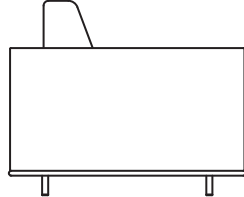


61

98

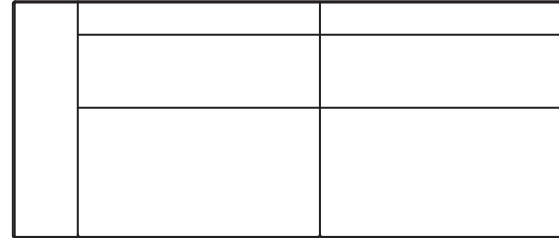


55

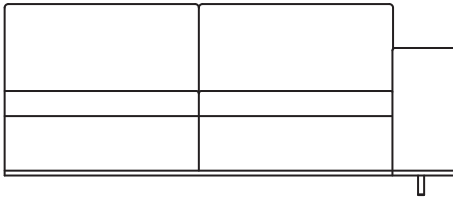

187


43

80

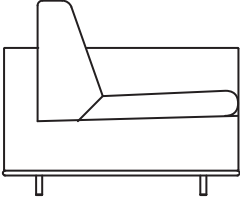


98

61

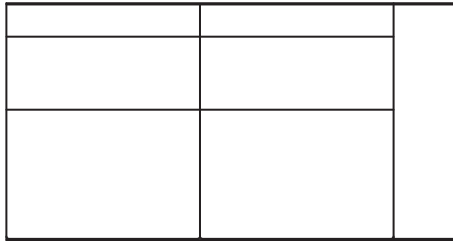


55

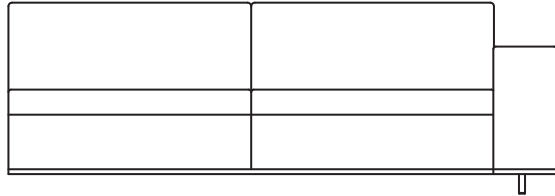

227


43

80

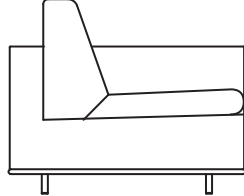


98

61

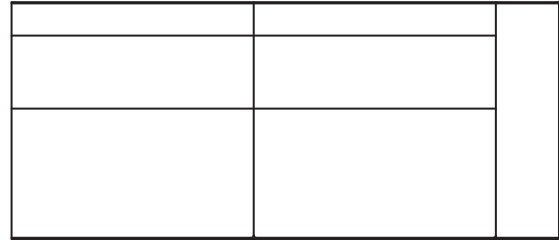


55

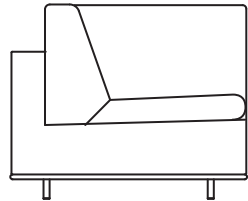

98


43

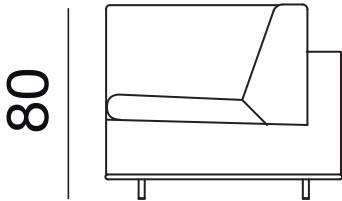

80

98

61

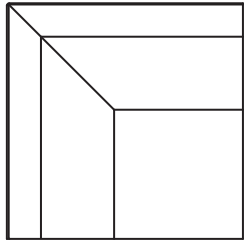

55